

UADs

List of supported devices

December 2019





T19P
Documentation



T21PE2
Documentation



T23G
Documentation



T27G
Documentation



T29G
Documentation



T40G
Documentation



T41P
Documentation



T41S
Documentation



T42G
Documentation



T42S
Documentation



T46G
Documentation



T46S
Documentation



T48G
Documentation



T48S
Documentation



T49G
Documentation



T52S
Documentation



T54S
Documentation



T56A
Documentation



T58V
Documentation



CP860
Documentation



CP920
Documentation



CP960
Documentation



W52P
Documentation



W56P
Documentation

Yealink

EASY VoIP



W60B
Documentation



W53H
Documentation



T53W
Documentation



T53
Documentation



T54W
Documentation



CP930W
Documentation



VP59
Documentation



T57W
Documentation



W80B
Documentation



IP5000
Documentation



IP7000
Documentation



VVX101
Documentation



VVX201
Documentation



VVX300
Documentation



VVX310
Documentation



VVX400
Documentation



VVX410
Documentation



VVX500
Documentation



VVX600
Documentation



VVX1500
Documentation



VVX150
Documentation



VVX250
Documentation



VVX350
Documentation



VVX450
Documentation



VVX411
Documentation



VVX501
Documentation



VVX150 OBi
Documentation



VVX250 OBi
Documentation



VVX350 OBi
Documentation



VVX450 OBi
Documentation



SPA301
Documentation



SPA501G
Documentation



SPA502G
Documentation



SPA504G
Documentation



SPA508G
Documentation



SPA509G
Documentation



SPA112
Documentation



8851
Documentation



8841
Documentation



7821
Documentation



6851
Documentation



7945G
Documentation



7965G
Documentation



7975G
Documentation



8865
Documentation



SPA514G
Documentation

Supported UADs



DP750
Documentation



GXP-1625
Documentation



GXP-1628
Documentation



GXP-1630
Documentation



GXP-1782
Documentation



GXP-2160
Documentation



GXP-2170
Documentation



GXV-3275
Documentation



HT-502
Documentation



HT-503
Documentation



HT-701
Documentation




HT-702
Documentation





HT-704
Documentation

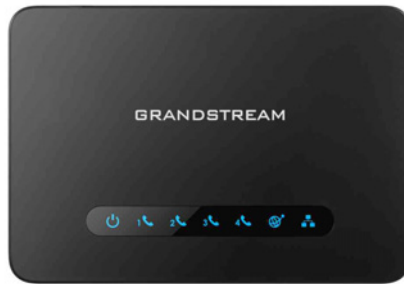

HT-814
Documentation



Obi1022
Documentation




Obi1032
Documentation



Obi1062
Documentation



Obi202
Documentation

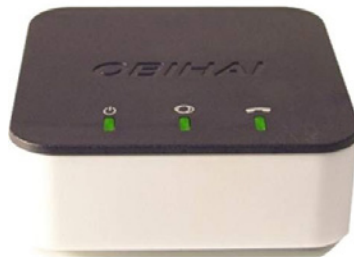

Obi300
Documentation



Obi302
Documentation



Obi504
Documentation



Obi508
Documentation



VCS754
Documentation



VSP600
Documentation



VSP715
Documentation



VSP725
Documentation



VSP726
Documentation



VSP735
Documentation



VSP736
Documentation



VSP716A
Documentation



VSP726A
Documentation



VSP736A
Documentation



VDP650
Documentation



ET605
Documentation



ET617
Documentation



ET635
Documentation



ET685
Documentation



UC802
Documentation



UC803
Documentation



UC804
Documentation



UC806
Documentation



UC840P
Documentation



UC842
Documentation



UC860P
Documentation



UC862P
Documentation



UC902P
Documentation



UC903
Documentation



UC912P
Documentation



UC912G
Documentation



UC923
Documentation



UC924
Documentation



UC924E
Documentation



UC926
Documentation



UC926E
Documentation



DW-210P
Documentation



DW-310P
Documentation



DW-610P
Documentation



6867i
Documentation

Gigaset



N720
Documentation



N510
Documentation



Maxwell Basic
Documentation



Maxwell 2
Documentation



Maxwell 3
Documentation



Maxwell 10
Documentation



Maxwell 10S
Documentation



Maxwell 4
Documentation

snom



320
Documentation



710
Documentation



D315
Documentation



D345
Documentation



D375
Documentation



D715
Documentation



D745
Documentation



D765
Documentation



D785
Documentation



D735
Documentation



D717
Documentation



D120
Documentation



eSpace7910
Documentation



eSpace7950
Documentation



AC1200MS
Documentation



AC1000MS
Documentation



AC1100MSF
Documentation



QX300
Documentation



H3
Documentation



H5
Documentation



X2P
Documentation



X3G
Documentation



X3SP
Documentation



X4
Documentation



X4G
Documentation



X5
Documentation



X6
Documentation



X7
Documentation



X7C
Documentation



X210
Documentation

Panasonic



KX-UTG300B
Documentation



KX-TGP550
Documentation



KX-HDV130
Documentation



KX-UT113
Documentation



KX-UT123
Documentation



KX-UT133
Documentation



KX-UT136
Documentation

Alcatel



IP100
Documentation



IP1020
Documentation



IP150
Documentation



IP200
Documentation



IP2015
Documentation



IP300
Documentation



IP600
Documentation



IP800
Documentation



S500
Documentation



S505
Documentation



S700
Documentation



S705
Documentation